


Warren Evans

— BEDS & MATTRESSES —

Assembling your Chic / Paris Warren Evans Bed

YOUR BED PARTS

Your choice of headboard

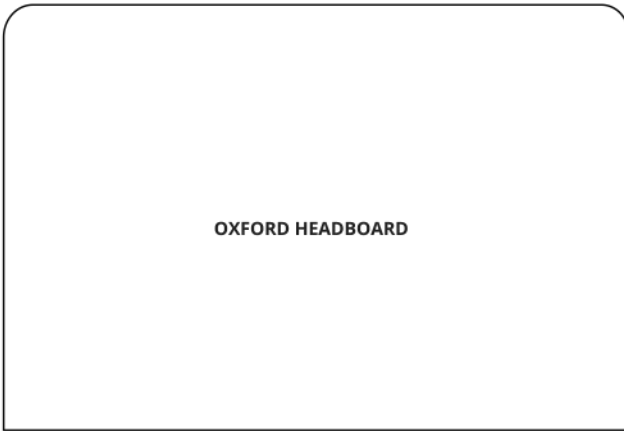

OXFORD HEADBOARD



SUNDAY HEADBOARD




CAMDEN HEADBOARD




MODERN HEADBOARD

SCREW PACK: (SUPPLIED)

- A** 20 x 40mm screws for Slats (5'6/6'0 - 20x 60mm screws)
- B** 25x 40mm screws (for Headboard)
- C** 25 x Screw Caps (for Headboard)
- D** 12 x 20mm Hex bolts (for Bed Frame)

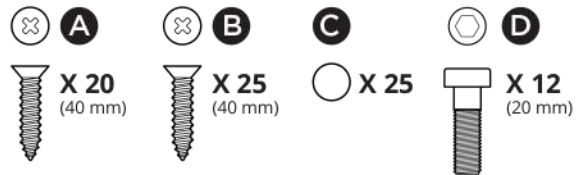


TOOLS REQUIRED:

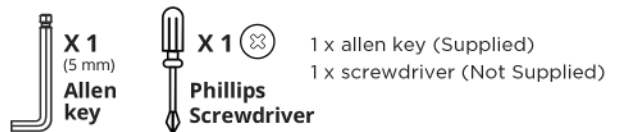

1 x allen key (Supplied)
1 x screwdriver (Not Supplied)

BED PARTS:


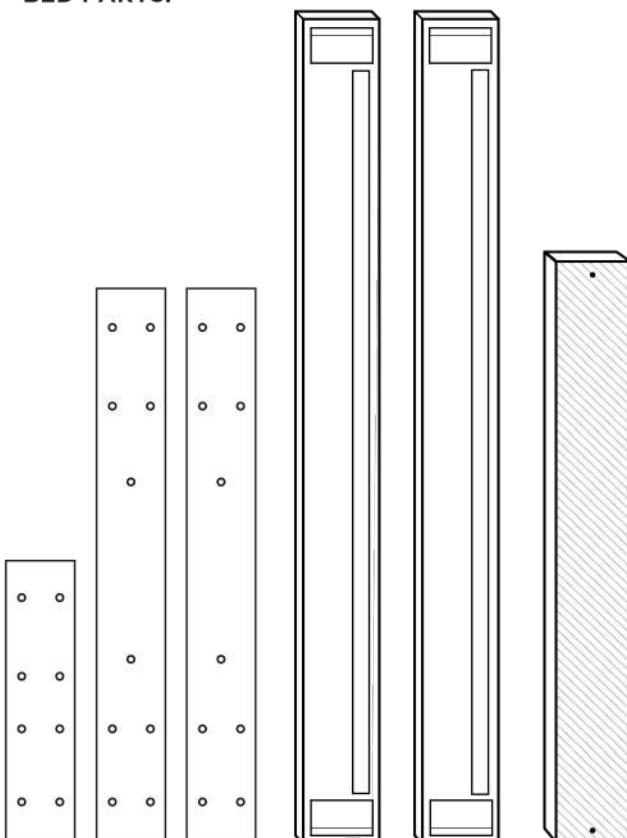


UPRIGHT SUPPORTS x3

SIDES x2

SLATS x10

Your footend and headend already come assembled with the legs in place

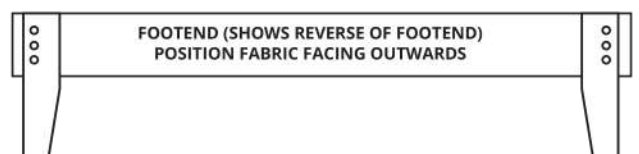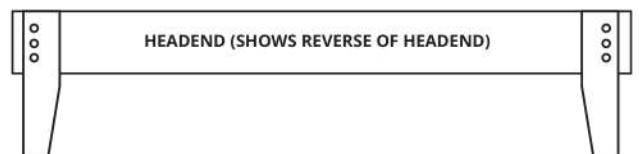

Please contact our sales team on 020 3927 7777 with any problems



Clean your floor first so you don't stain the bed fabric. Place Head-end by the wall where you would like the headboard to be. Place the sides on the left & right side, and foot end at the bottom



Make sure you get the orientation of the bed sides in the correct position.

The end with the metal bracket not sitting flush with the side is the head-end side.



The end with the metal bracket sitting flush with the side is the foot-end.

Also, the wooden beam that is screwed into the side should be facing up.



Screw in the 40mm Hex bolts (provided in the screw pack) loosely by hand into the left side and right side of the head-end and the foot-end.



Take one side of the bed frame and place the bracket on to the Hex bolts that you just put in.

Do this with all 4 corners of the bed frame.



The metal bracket should slide down onto the Hex bolts (if not, unscrew the Hex bolt a couple millimeters & it will slide down)

With the allen key provided make sure to tighten all the Hex bolts on all 4 corners.



Your bed frame should now look like this.




Place the first slat down and push it as far up to the head-end as possible & screw it in with the 40mm screws provided.



Place the slat with the 'Warren Evans' logo at the foot-end & push down till it's touching the foot-end and screw it in.

Now, place the rest of the slats onto the bed frame (space them out roughly evenly) and screw them all in.

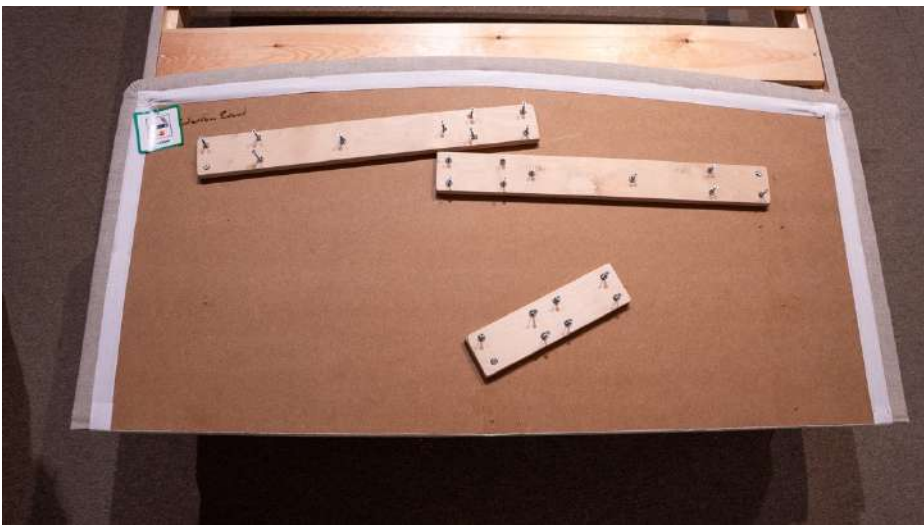

Put in the screw caps and 40mm screws provided into the pre-drilled holes.

This will make it easier to screw them all down in the next couple steps.



Unfold the supporting beams of the headboard till all 3 are straight down.

There is a guide-line to follow on the back of the headboard to make sure the supporting beams are perfectly straight.



Screw in the screws the rest of the screws into the headboard.

(leave the 4 screws at the bottom of each beam, as they are for attaching the headboard to the bed frame)



Align the headboard on top of the frame by the head-end.

Make sure it is central

Now, you can pick up the headboard and pivot it until it is in position. (Example on next step).



Position your headboard on to the head-end and make sure it is central. With one hand holding the top, screw in the screws on the central beam.

(if you have another person available to help, let them hold the headboard until you screw it in)



Finish screwing in the remaining screws into the back of the head-end