


Warren Evans

— BEDS & MATTRESSES —

Assembling your Traditional / Minimalist Warren Evans Bed


YOUR BED PARTS

Your choice of headboard

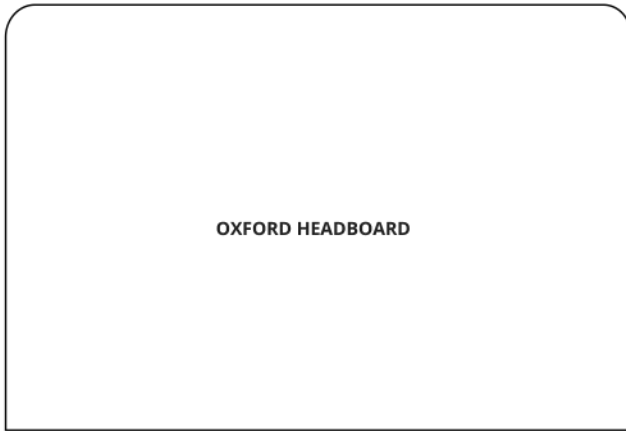


SCREW PACK: (SUPPLIED)


- A** 20 x 40mm screws for Slats
(5'6/6'0 - 20x 60mm screws)
- B** 10 x Pozey flange screws
(for triangles for headboard)
- C** 8 x 60mm hex screws/bolts
(for attaching the HB uprights to headend)
- D** 8 x washers

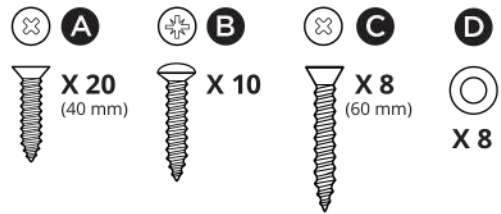


BED PARTS:

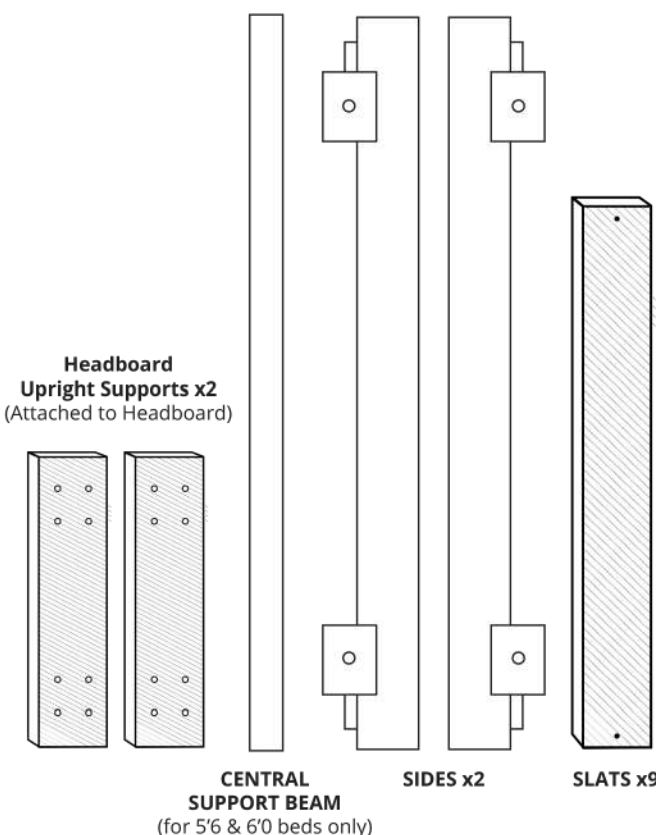


TOOLS REQUIRED:

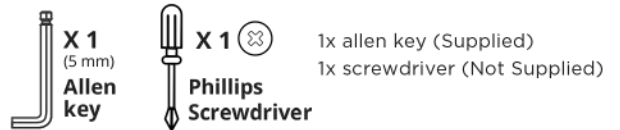

Allen key and Hex bolts are only supplied if you have ordered a headboard

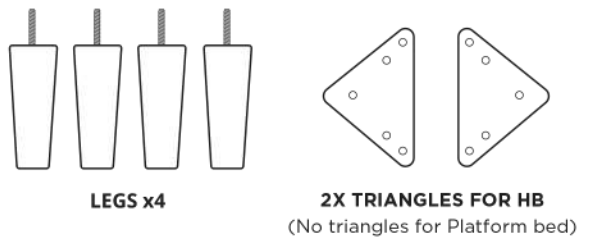

Please contact our sales team on 020 3927 7777 with any problems

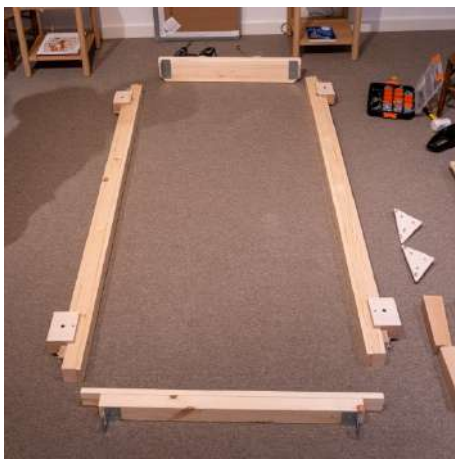


Place Head-end by the wall where you would like the headboard to be. Place the sides on the left & right side, and foot end at the bottom.



Screw in all 4 legs.



Flip the sides so that the legs are on the floor. Place one side of the foot-end bracket onto the Hex screws. (The bolts are already in place for you)

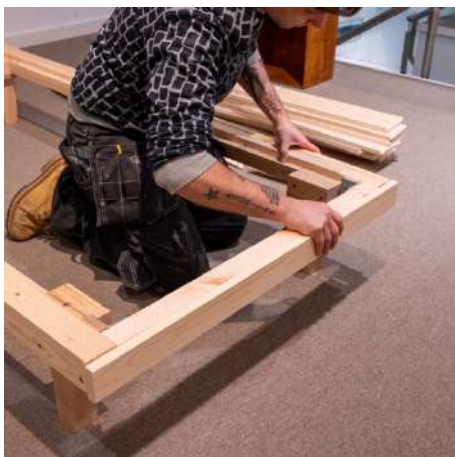


Flip the other side and repeat the same process.



Make sure that the side and foot-end is flush to each other. Screw in the hex bolts with the allen key provided to tighten to the metal bracket. Making sure its all flush.




With your other hand make sure that the foot-end and side is flush, whilst screwing the hex bolts down.

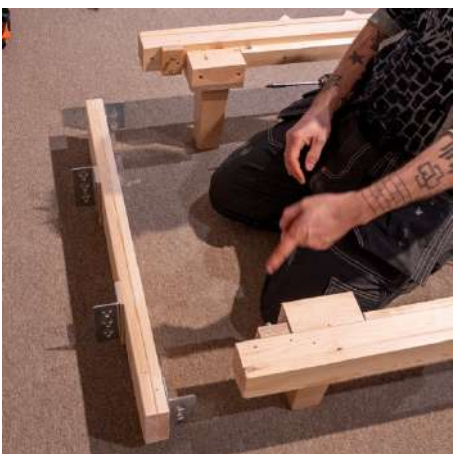

If you have 5'0 or smaller bed SKIP THIS STEP

For 5'6 / 6'0 beds, place the central support beam on the metal bracket, do not screw it in.

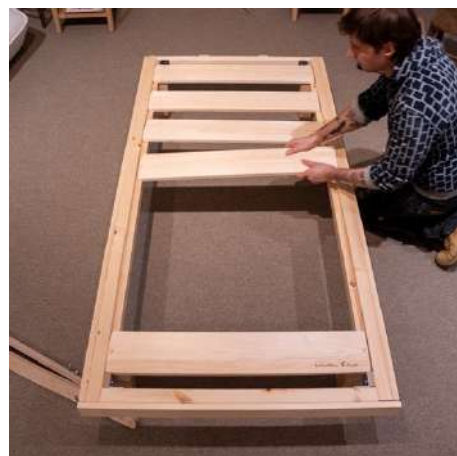


Place all 9 of the slats from top to bottom.

The last slat (Bottom) should be the one with the 'Warren Evans' Logo.



Repeat the same process with the head-end of the bed.

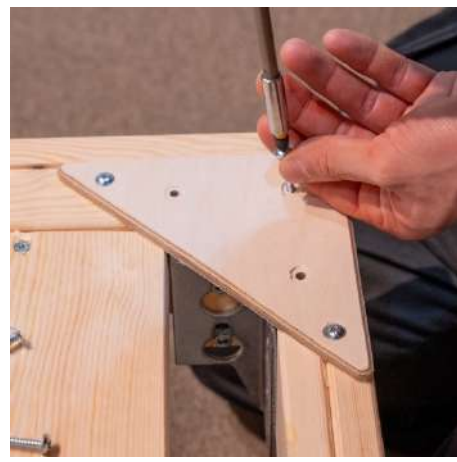

Make sure to push the top slat as far up as it can go, and the bottom slat as far down as it can go. Both top and bottom slats have to touch the exterior frame. Screw in all the slats using the 40mm screws provided.

On the head-end place one of the triangles provided flush to the head end and flush to the side as shown in the picture.

Screw it in place with the pozey flange screws provided.


If you have a 5'6 / 6'0 bed frame, make sure to screw the top and bottom slat to the center beam.



Place the headboard (with the upright supports already attached) onto your bed as shown in the image.

Place the washers and pre-screw the screws into place on both the left and right upright as shown in the image.

Once you've pre-screwed all 8x screws into both uprights, pick up the headboard and rest the bottom of the upright on the small lip on the headend.

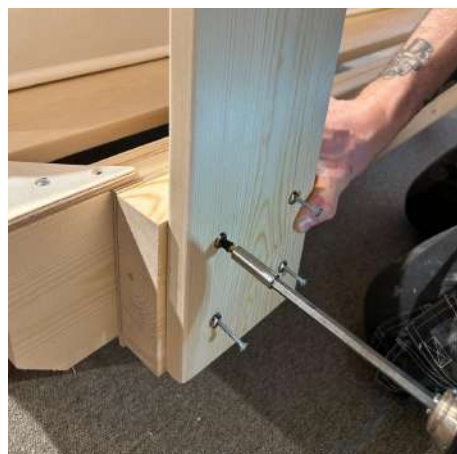

Shown in this image is how you should have the headboard resting on the small lip.

Make sure that the inside of both uprights is flush with the edge of the wooden block, as shown in image.

Screw in all 8x screws to the headend of the bed frame. Move the bed into your desired position.