

Warren Evans

— BEDS & MATTRESSES —

IMPORTANT- Lay bed parts on a clean carpet or blanket to prevent any damage or scratches to the fabric or wood finish.


EXTERIOR BOX PARTS



SLATS



INTERIOR BASE PARTS
& CENTRE BEAM

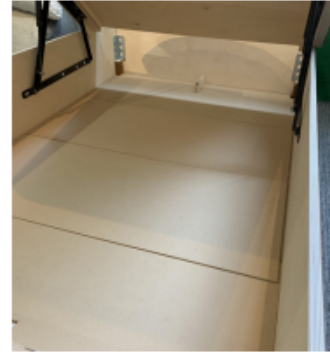

Stage one: Build the exterior box.


- Set out the base parts as shown above, half a metre from the wall the bed will go up against, to allow room to attach the headboard later.
- The head end is unfinished and should face the wall





STEP 1: Place 3 bolts into each of the head and foot end. Screw in only one full turn by hand (these will be tightened up later).



STEP 2: Raise the side onto its legs and manoeuvre the head end so that you can insert the head of the bolts into the steel bracket holes so that they drop down into the slots. Repeat with all four corners.

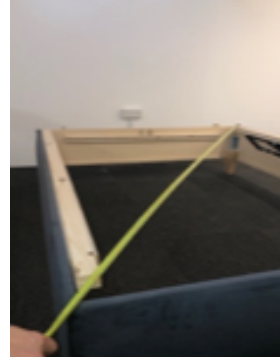

STEP 3: Measure sides diagonally with a tape measure from corner to corner. Check that both measurements are identical. If not, move the foot end to the left or right until the measurements are the same.

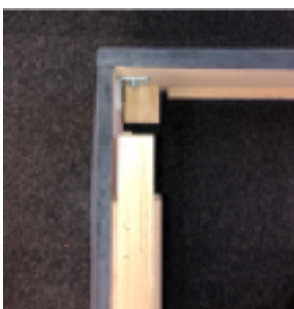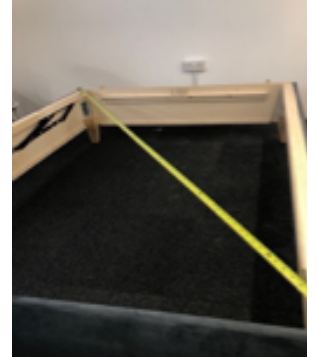


STEP 4: Make sure corners are at a right angle before next step.

Warren Evans

BEDS & MATTRESSES

Before adding slats:

- Unscrew screws on each side of the bed for it to open.
- On the second screw, hold down on the platform to avoid it springing up.

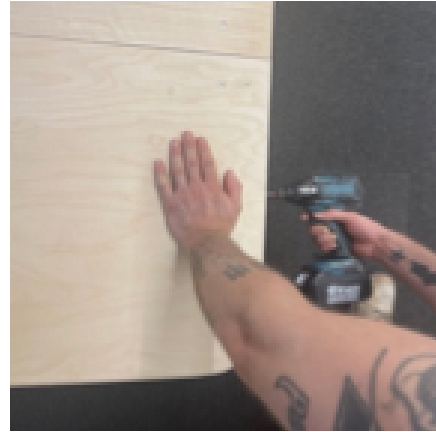

Stage two: Adding your slats

- Make sure the pre-drilled holes are facing upwards.
- This allows the screw-head to rest below the surface of the wood and prevents the screws from catching on your mattress or linen.




STEP 1: Add two 'Z' bars to the bottom of the frame to support the slats.



STEP 2: Add first slat and slot in between 'Z' bars.



STEP 3: Add the rest of the slats to the bottom of the base. Make sure that they do not overlap.

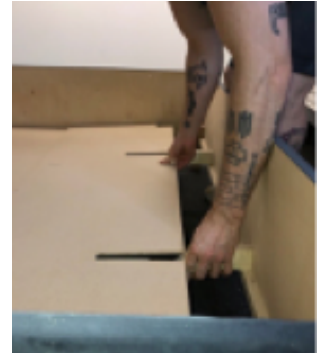

STEP 4: Slot in the last slat in between 'Z' bars. (as done in the first step.



STEP 5: Add in the cross beam between the two ridges at either end of the base.


Warren Evans

BEDS & MATTRESSES

Stage 3: Headboard assembly



STEP 1: Put the screws in the back but not fully screwed in.

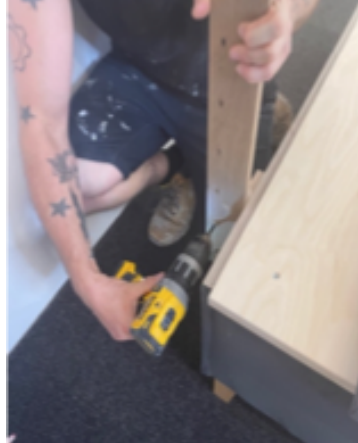

STEP 2: Drill in the struts to the back of the bed (screw in different holes for different headboard height adjustments).



STEP 3: Slot in the headboard screws into the struts.



Safety hole located on each side of the bed at the foot end.

IMPORTANT SAFETY INFORMATION

MOVING YOUR BED

When moving your bed, please re-insert the bronze safety screws previously removed into the safety hole located on each side of the bed at foot end (shown above).

WARNING: without the weight of a mattress or slats, the slat bar will spring up which could cause injury.

Whenever you move your bed around your room, always use 2 people and never drag the bed, as any damage caused will affect your guarantee.

DISMANTLING YOUR BED

When dismantling, carefully follow the instructions in reverse order, paying particular attention to inserting the bronze safety screws at the correct step.

TO KEEP YOUR BED CLOSED

If you ever remove the mattress from your bed, to turn it or rotate it, ALWAYS insert the 2 safety pins (C) into the safety holes shown above.

Always keep your safety screws and pins safe.